



Point Cloud is not shown when working with Layer Floor is turned ON

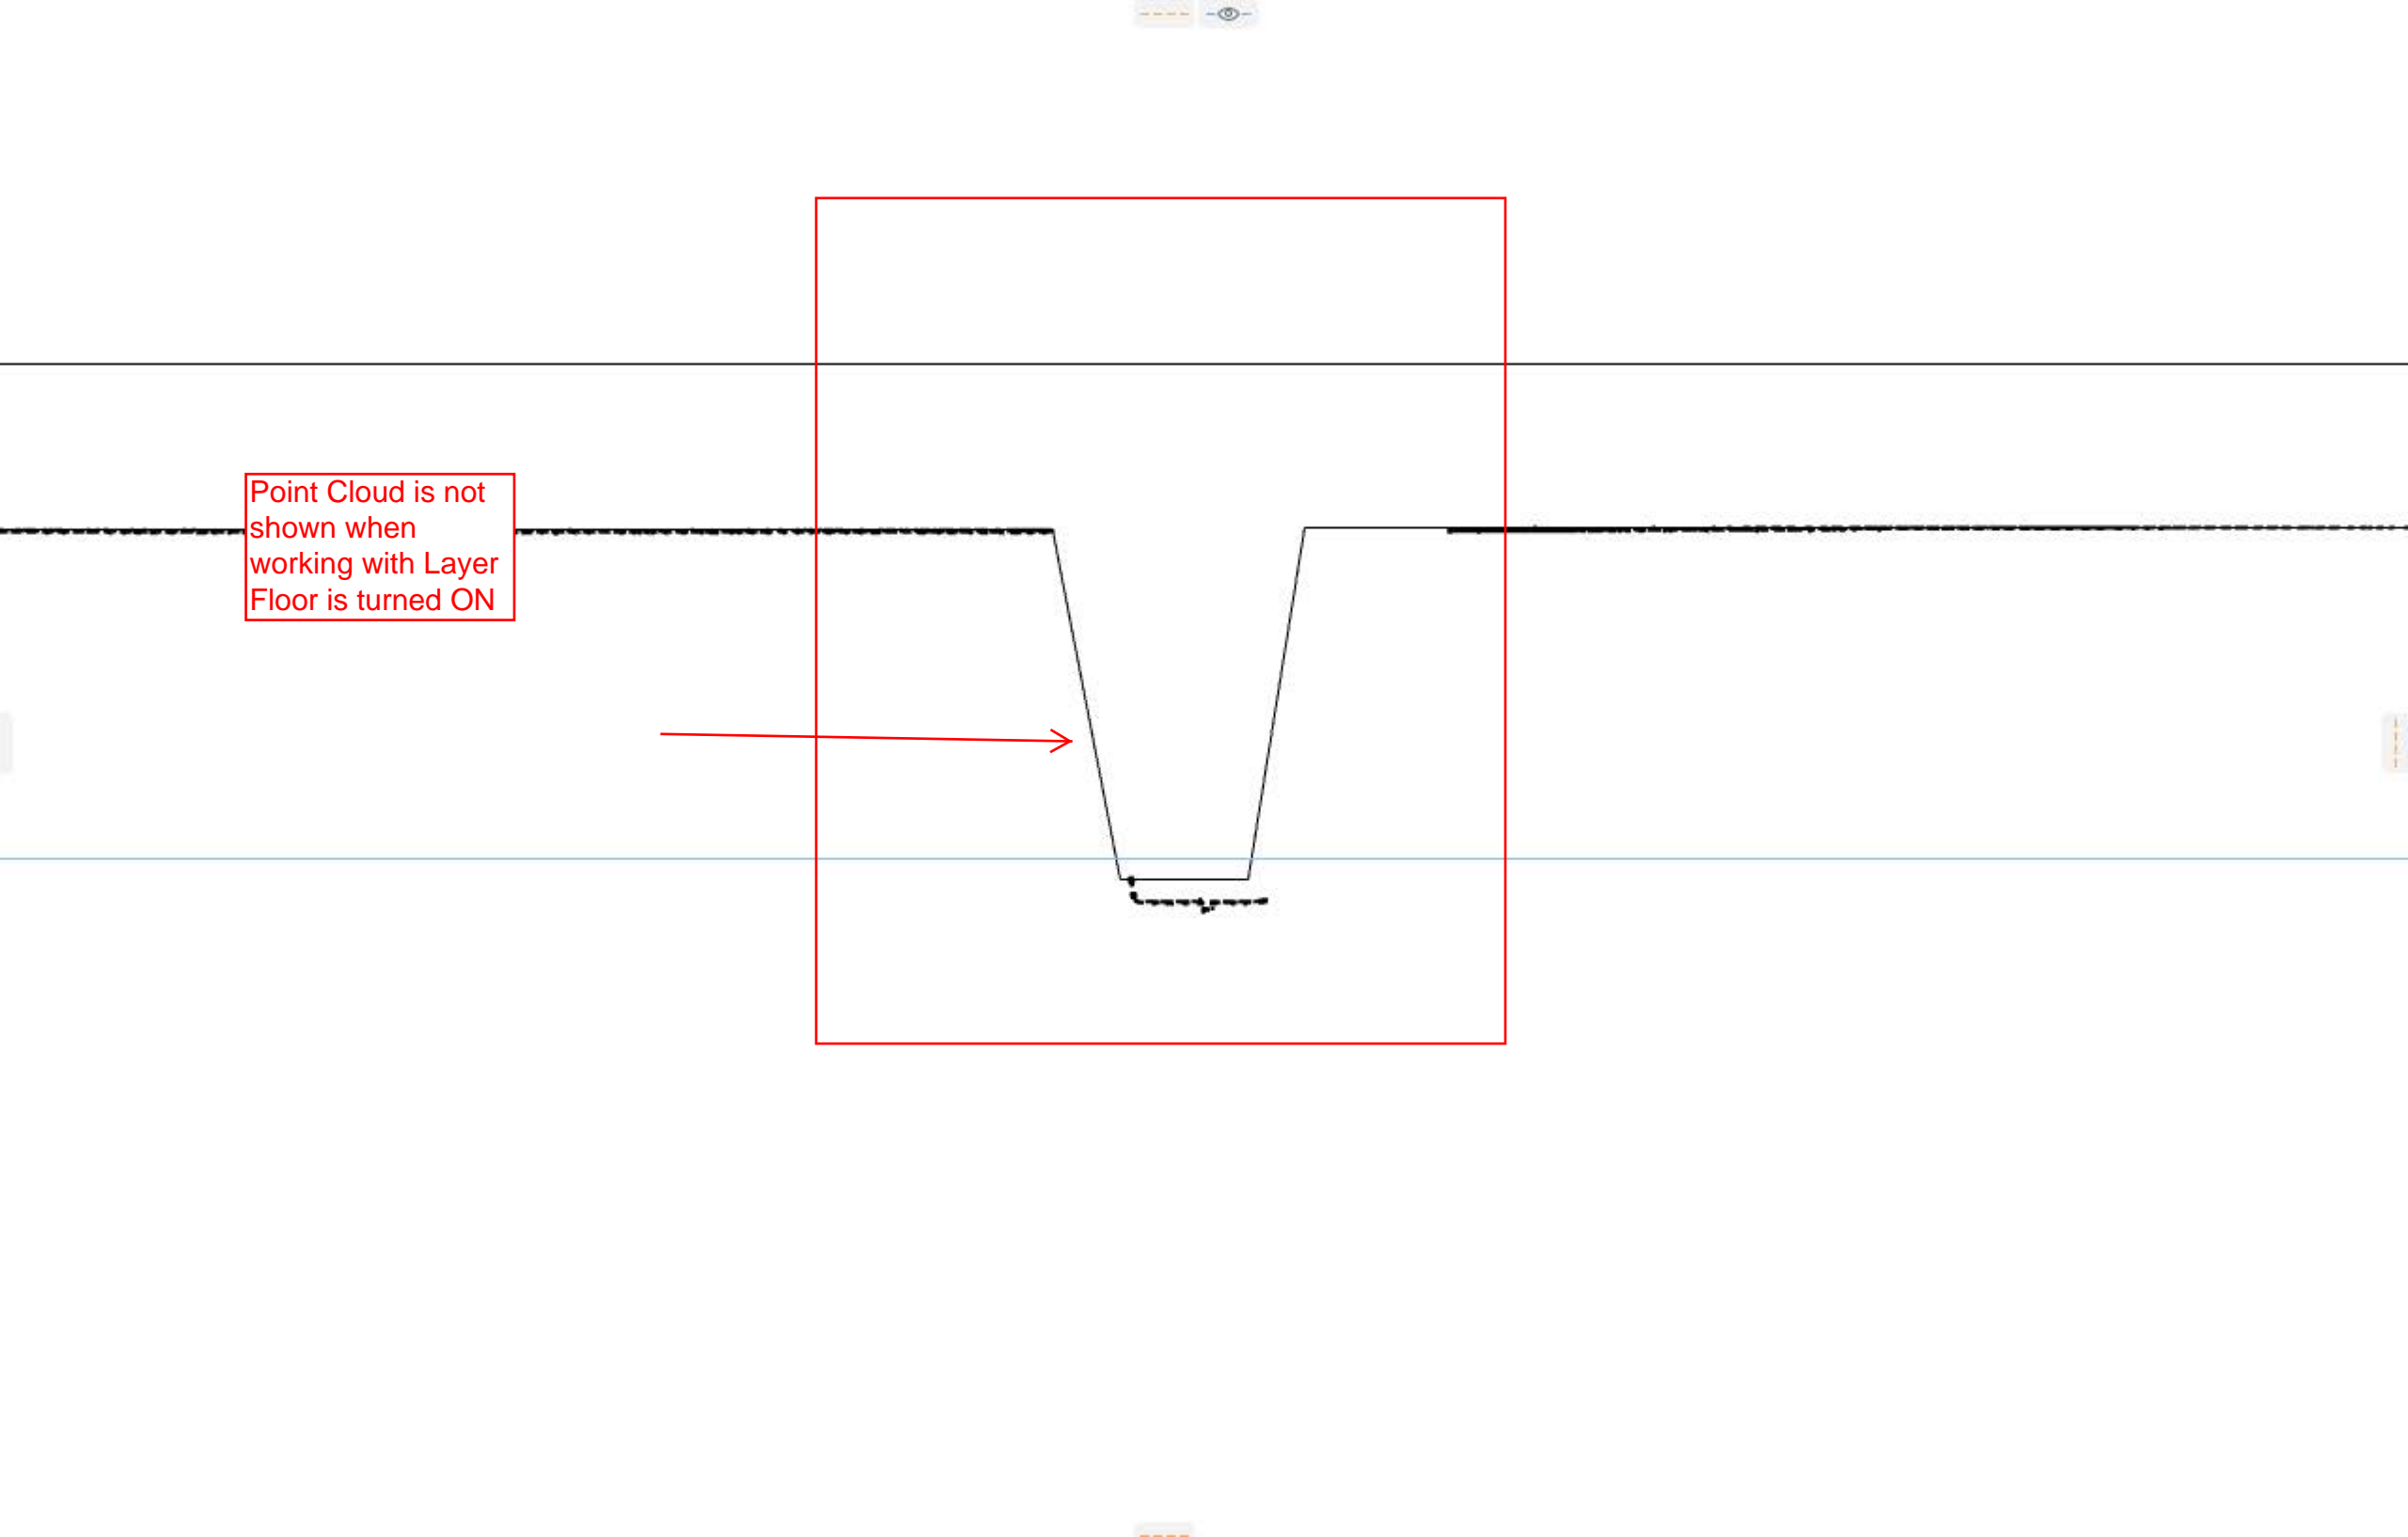

Point Cloud is shown when Layer Floor is turned off.

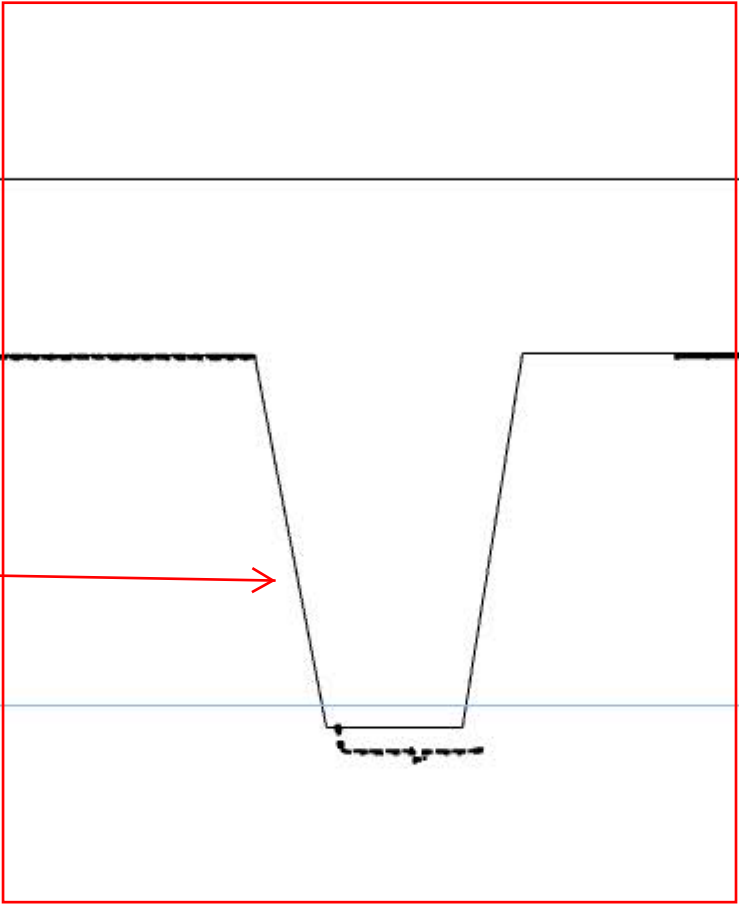